
















AVATAR EXECUTIVE ASSEMBLY INSTRUCTIONS


PARTS LIST

①  1PC	②  1PC	③  1PC	④  1PC	⑤  1PC	⑥  1PC	⑦  1PC	⑧  5PCS	⑨  4PCS	⑩  6PCS
⑪  3PCS	⑫  1PC	⑬  1PC	⑭  2PCS	<p>ATTENTION: Do not use this chair unless all bolts and parts are firmly tightened. It is recommended to check and retighten all bolts and parts at least every 3 months.</p>					


STEP 1

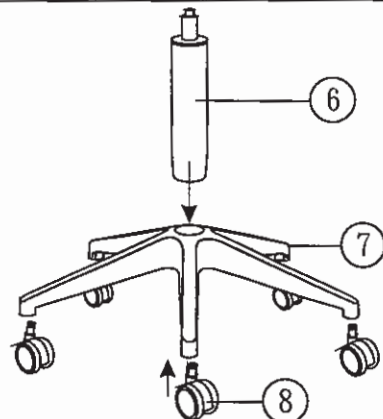


STEP 2

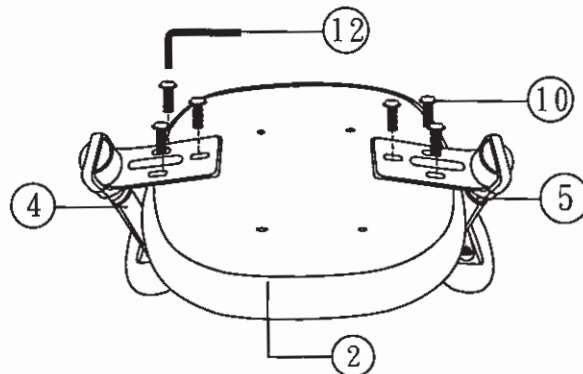


STEP 3

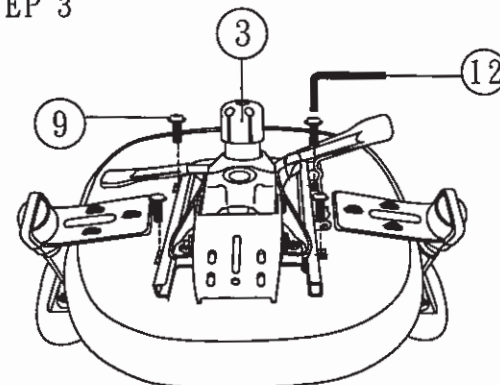

STEP 4

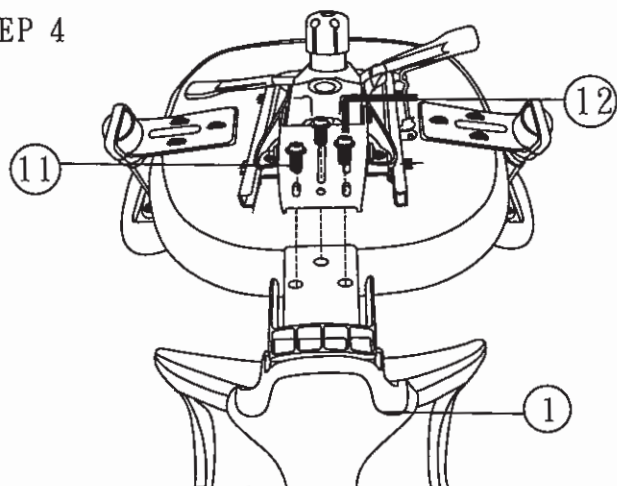

STEP 5

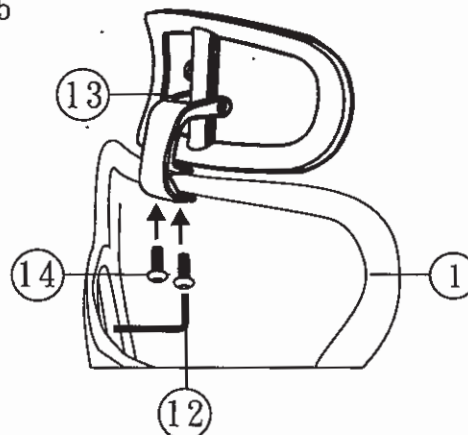

STEP 6

